> INOX-STAR <





Safety instructions This safety instruction/declaration of the manufacturer has to be

kept on file for the whole lifetime of the product. Translation of the Original instructions



RUD Ketten Rieger & Dietz GmbH u. Co. KG 73428 Aalen Tel. +49 7361 504-1370 Fax +49 7361 504-1171 sling@rud.com www.rud.com



Eye bolts made out of **DUPLEX** stainless steel

BRUD EG-Konformitätserklärung entsprechend der EG-Maschinenrichtlinie 2006/42/EG, Anhang II A und ihren Änderungen RUD Ketten Rieger & Dietz GmbH u. Co. KG Friedensinsel Hersteller: 73432 Aalen Hiermit erklären wir, dass die nachfolgend bezeichnete Maschine aufgrund ihrer Konzipierung und Bauart, sowie in der von uns in Verkehr gebrachten Ausführung, den grundlegenden Sicherheits- und Gesundheitsanforderungen der EG-Maschinennichtlinie 2006/42/EG sowie den unten aufgeführten harmonisierten und nationalen Normen sowie technischen Spezifikationen entspricht. Bei einer nicht mit uns abgestimmten Änderung der Maschine verliert diese Erklärung ihre Gültigkeit. Produktbezeichnung: <u>INOX-Star</u> Folgende harmonisierten Normen wurden angewandt: DIN EN ISO 12100 : 2011-03 Folgende nationalen Normen und technische Spezifikationen wurden außerdem angewandt BGR 500, KAP2.8 : 2008-04 Für die Zusammenstellung der Konformitätsdokumentation bevollmächtigte Person Michael Betzler, RUD Ketten, 73432 Aalen <u>Dr.-Ing. Arne Kriegsmann,(Prokurist/QMB)</u> Name, Funktion und Unterschrift Verantwortlicher Aalen, den 26.09.2016

	EC-Declaration of conformity
According to the	EC-Machinery Directive 2006/42/EC, annex II A and amendments
Manufacturer:	RUD Ketten Rieger & Dietz GmbH u. Co. KG Friedensinsel 73432 Aalen
as mentioned below, corre health of the correspondir mentioned harmonized ar	ne equipment sold by us because of its design and construction, esponds to the appropriate, basic requirements of safety and gg EC-Machinery Directive 2006/42/EC as well as to the below dn ational norms as well as technical specifications. In of the equipment, not being agreed upon with us, this declara-
Product name:	INOX-STAR
The following harmonized	norms were applied:
The following natinotized	DIN EN ISO 12100 : 2011-03
The following national nor	rms and technical specifications were applied:
• • • • • • • • • • • • • • • • • • •	BGR 500, KAP2.8 : 2008-04
	
Authorized person for the	configuration of the declaration documents: Michael Betzler, RUD Ketten, 73432 Aalen
Aalen, den 26.09.2016	DrIng. Arne Kriegsmann,(Prokurist/QMB) frat // / / / / / / / / / / / / / / / / /
, 2010012010	Name function and signature of the responsible person



Before every use, please read the Safety Instruction of the INOX-STAR carefully and make sure that you understand all substance.

Improper use or care of this eyebolt can result in bodily injury or property damage and eliminates any warranty!

1 Application and warning information



WARNING

Improper assembled or damaged INOX-STAR and inappropriate use can result in deadly injury or lead to heavy injuries when load drops. Inspect the INOX-STAR before each use carefully!

The INOX-STAR must only be used by competent and trained people with adequate knowledge respecting BGR/DGUV 100-500 requirements, and outside Germany the corresponding country specific requirements must be utilised.

2 Intended use of INOX-STAR

The eyebolt INOX-STAR can be used as a lifting point in general.

The INOX-STAR must not be used when load swivels, because the INOX-STAR could turn loose.

The lifting point must only be used up to the maximum required WLL (see chart 2).

The INOX-STAR eyebolt must only be used in the hereby specified application.

3 Material properties

The utilised stainless Duplex-steel 1.4462 for the body and the bolt has a good resistance against wear and local corrosion like pitting, crevice corrosion and stress corrosion cracking in sea water and high chloride and H2S containing media.

This steel is very common in the construction industry, chemical industry, oil industry, food industry (only limited resistance against lactic acid), in the machine engineering for example, as REA-components and transport boxes, in desalting plants at OFF-Shore areas like shipbuilding.

The material can also be utilised in the nuclear industry as far as nuclear technical requirements or object specifications do allow the usage (according to VdTÜV 418).



HINT

The material must not be used in the following areas:

Load bearing parts in indoor swimming pool atmospheres, which are neither permanent rinsed with water nor cleaned, if their failure could cause serious personal injury. For example when used as connecting element for a suspended ceiling, pendents or loudspeakers or for the fixation of water slides or any other construction elements (read ISER-Merkblatt 831).

4 Installation information

4.1 General information

- Capability of temperature usage:
 The stainless steel PSA-INOX-STAR eye bolts can be used in the temperature range between -40°C up to 280°C (according to VdTÜV 418).
- RUD lifting points must not be used under chemical influences such as acids, alkaline solutions and vapours. Please observe chapter 2, Intended use of INOX-STAR and chapter 3 Material properties.

4.2 Assembly information

The material construction to which the lifting point will be attached should be of adequate strength to withstand forces during lifting without deformation (certificate of static forces). Rm > 340 N/mm² For steel of the strength S235JR (1.0037) or Cast iron GG 25 (0.6025 - without blowhole) the bolt length should be 1,5xM (=L).

When lifting light metals, nonferrous metals and gray cast iron or other materials the thread has to be chosen in such a way that the WLL of the thread corresponds to the requirements of the corresponding base material. For material with lower strength, please use lifting points with longer thread engagement.

German employers insurance association (BG/DGUV) recommends the following minimum thread engagement lengths:

2 x M in aluminium alloys

2,5 x M in light metal with low strength.

Please choose for light metals, nonferrous metals and grey cast iron or other materials the thread has to be chosen in such a way that the WLL of the thread corresponds to the requirements of the corresponding base material.

2. The bolting location for the eyebolt should be marked with paint.

- 3. The eyebolt should be installed as follows:
 - the coupling element must be free moveable.
 - locate lifting point in such a way that prohibited loading, like turning or flipping of the load will be avoided:
 - Single fall lifting: vertical, above centre of gravity.
 - Double leg lifting: over and at each side of the centre of gravity.
 - Three- or 4 leg lifting: equal in the same level around centre of gravity.
- 4. Symmetry of load:

Determine the necessary WLL of each lifting point for symmetrical and unsymmetrical loading according to the following physical calculation correlation:

$$W_{LL} = \frac{G}{n \times \cos \beta}$$

= necessary working load limit of the single

lifting point (kg) = weight of load (kg)

= number of load bearing

= inclination angle of single strand

Number of load bearing strands:

	Symmetric	Unsymmetric
Double strand	2	1
Three-/ Four strand	3	1
(see also chart 2)	•	

- 5. Make sure that a plane bolting surface is provided (Ø E, see chart 1). Maximum countersink of the threaded hole = Nominal diameter of thread
- 6. Drill the tapped blind holes deep enough so that the shoulder of the INOX-STAR bolt sits properly on the plane surface.

- 7. The INOX-STAR must be adjustable through 360° when installed.
 - For a **temporary** assembly, hand tightening with an allen key is sufficient.
 - If the INOX-STAR shall be installed permanently, a torque of 25 Nm (+/- 10 %) must be applied, plus securing with threadlocker has to be done. It is possible to receive a socket wrench for the usage of a torque:

Type metric	Torque	Part-No.
		key
INOX-STAR M12	25 Nm	7997750
INOX-STAR M16	60 Nm	7997751
INOX-STAR M20	115 Nm	7997752
INOX-STAR M24	190 Nm	7997753

Chart 1

Secure in general all lifting points which are installed permanently, e.g. with glue.



Shock loading or vibrations can cause unintentional dismantling. To avoid this use liquid thread locker such as Loctite or WEI-CONLOCK (depending on the application, please pay attention to the manufacturer's instruction).

Attention: Ring Body has to be free rota-

8. After the installation has been done, a competent person should check the suitability of the fall protection eyebolt (see chapter 5, Inspection criteria).

Methode of lift	\$	G	3 4 5 2 xG1	å G å	G G		G	GGG		G		
Number of strands	1	1	2	2	2	2	2	3 / 4	3 / 4	3 / 4		
Inclination angle <ß	0°	90°	0 °	90°	0-45°	>45-60°	Un- symm.	0-45°	>45-60°	Un- symm.		
Factor		1		2	1.4	1	1	2.1	1.5	1		
	INOX-STAR- for max. load weight t in Tons, tightened and adjusted to the load direction											
Type metric	F2	F1										
INOX-STAR M12	1.2 t	0.5 t	2.4 t	1.0 t	0.71 t	0.5 t	0.5 t	1.06 t	0.75 t	0.5 t		
INOX-STAR M16	2.4 t	1.0 t	4.8 t	2.0 t	1.4 t	1.0 t	1.0 t	2.1 t	1.50 t	1.0 t		
INOX-STAR M20	3.6 t	2.0 t	7.2 t	4.0 t	2.8 t	2.0 t	2.0 t	4.25 t	3.0 t	2.0 t		
INOX-STAR M24	5.2 t	2.5 t	10.4 t	5.0 t	3.5 t	2.5 t	2.5 t	5.25 t	3.75 t	2.5 t		
	INOX-STAR- for max. load weight in lbs, tightened and adjusted to the load direction											
Type metric	F2	F1										
INOX-STAR M12	2646 lbs	1102 lbs	5292 lbs	2204 lbs	1558 lbs	1102 lbs	1102 lbs	2337 lbs	1653 lbs	1102 lbs		
INOX-STAR M16	5292 lbs	2205 lbs	10584 lbs	4410 lbs	3118 lbs	2205 lbs	2205 lbs	4677 lbs	3307 lbs	2205 lbs		
INOX-STAR M20	7938 lbs	4410 lbs	15876 lbs	8820 lbs	6236 lbs	4410 lbs	4410 lbs	9355 lbs	6615 lbs	4410 lbs		
INOX-STAR M24	11466 lbs	5512 lbs	22932 lbs	11024 lbs	7795 lbs	5512 lbs	5512 lbs	11692 lbs	8268 lbs	5512 lbs		

Chart 2 Subject to technical alterations

4.3 User information

 Inspect INOX-STAR eyebolt regularly before each usage in regard of tightening, corrosion, wear, deformation etc. (see chapter 5 Inspection criteria).



WARNING

Wrong assembled or damaged lifting means as well as incorrect usage may result in serious or deadly injuries.
Lifting means must be in general inspected before each usage.

- If a safe usage is doubtable or if the lifting mean has been stressed by a dropped load, for safety reasons the usage must be withdrawn.
 A competent person must decide whether the lifting mean can be used further on.
- The INOX-STAR has to be adjustable through 360° when fitted and with key disengaged. Adjust to direction of pull before attaching of the lifting mean.



HINT

Attention: INOX-STAR eyebolts are not suited for turning under load!

- Please observe that the lifting mean connected to the INOX-STAR should be free moving. When connecting and disconnecting the lifting means (sling chain, round loop, wire rope) pinches and impacts should be avoided. Damage of the lifting means caused by sharp edges should be avoided as well.
- Eliminate any damage of the INOX-STAR for example caused by loading on sharp edges.
- If the INOX-STAR is used exclusively for lashing, the value of the working load limit can be doubled.
 LC = 2 x WLL

4.4 Hints for the regular inspection

In time periods complying to the need or usage a technical expert should control at least once a year the appropriateness of the lifting point. This inspection must also be done after each event of damage or special incident.

5 Inspection criteria

Observe and control the following points before each usage in regular periods, after assembly and after special incidents:

- Bolt tightening (torque)
- · Completeness of the lifting point
- Complete, readability of the Working Load Limit (WLL) as well as existing sign of manufacturer
- Deformation on load bearing parts like basic body and bolt
- Mechanical damages like notches, especially when located in areas of tensile stress
- · strong corrosion
- Reduction of cross section caused by wear > 10 %
- Cracks at load bearing parts
- · Function and damage of bolts and threads
- · Easy turning of the ring, free of jerk must be assured



HINT

Translation of the original instruction manual


In case of doubts or misunderstandings, the German version of this document is decisive.

RUD components are tested in accordance with DIN EN 1677, with a minimum of 20.000 load cycles at 1.5 x WLL.

Employers insurance association (BG/DGUV) recommends:

At high dynamic stress with a high number of load cycles (permanent usage), the bearing stress must be reduced acc. to FEM with 1BM (M3 acc. to DIN EN 818-7), e.g. by using the next bigger nominal size.

Туре	WLL	weight	Α	В	С	D	E	F	G	Н	J	К	Т	Ref No.
INOX-STAR M12	0.5 t	0.2 kg	18	14	12	30	30	M12	56	32	8	18	43	7993835
INOX-STAR M16	1.0 t	0.3 kg	24	16	14	35	35.5	M16	65	38	10	22	50	7993836
INOX-STAR M20	2.0 t	0.5 kg	30	19	16	40	41.5	M20	74	46.5	12	27.5	57	7993837
INOX-STAR M24	2.5 t	0.9 kg	36	24	19	48	50	M24	92	56	14	33	70	7993838
INOX-STAR M12	1102 lbs	0.44 lbs	23/_"	9/ ₁₆ "	¹⁵ / ₃₂ "	1 ³ / ₁₆ "	1 ³ / ₁₆ "	M12	27/ ₃₂ "	1 1/4"	5/ ₁₆ "	23/32"	1 11/,"	7993835
INOX-STAR M16	2205 lbs	0.75 lbs	¹⁵ / ₁₆ "	5/ "	9/ ₁₆ "	1 ³ / ₈ "	1 ³ / ₈ "	M16	2 9/16"	1 1/2"	13/_"	⁷ / ₈ "	1 31/32"	7993836
INOX-STAR M20	4410 lbs	1.1 lbs	1 ³ / ₁₆ "	3/4"	5/8"	1 9/,"	1 ⁵ / ₈ "	M20	215/16"	17/8"	15/32"	1 3/32"	2 1/4"	7993837
INOX-STAR M24	5512 lbs	2.2 lbs	1 ²⁷ / ₆₄ "	15/ " 16	3/4"	1 7/8"	131/32"	M24	3 ⁵ / ₈ "	2 3/16"	9/ ₁₆ "	1 5/ "	23/4"	7993838

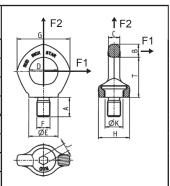

Subject to technical alterations